



GiiNii™ GN-705W
Digital Picture Frame
User Manual

www.giinii.com

Copyright

© GiiNii™ 2009. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of GiiNii™.

Disclaimer

GiiNii™ makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, GiiNii™ reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Safety instructions

Before operating the photo frame, carefully read and follow the instructions below.

- Retain this User Manual for future reference.
 - Read the safety and operating instructions carefully before using the product. All warnings on the product and in the operating instructions should be observed.
 - Do not place this product under direct sunlight or near heat sources, such as in a closed car under sunlight or near a stove. The outer casing of this product may become deformed and the sophisticated sensors inside may become damaged due to excessive heat.
 - Do not use this product near water, in the rain or allow any liquid to get inside this product. Water and moisture may cause short-circuit to the electronic components and lead to malfunctions.
 - Do not use this product near strong electromagnetic sources, such as a microwave oven. The electromagnetic interference may cause this product to malfunction.
-

- Do not drop or apply shock/vibration to this product. Strong impacts may damage the components inside.
 - Do not insert objects other than compatible memory cards into the memory card slots of this product. The metal contacts inside the slots can easily become damaged by foreign objects.
 - Do not use an unknown power adapter other than the one supplied with the photo frame. Connecting this product to an unknown power adapter is very dangerous and may lead to fire or explosion.
 - Do not cut, bend, modify, place heavy objects, or step on the power adapter cord. Otherwise the external insulation may be damaged and result in short-circuit or fire.
 - If there are strange odors or heat emitting from this product or any signs of malfunction, disconnect the photo frame from the power immediately and contact your dealer for inspection or service.
 - Use a smooth, soft cloth to clean the surface of the screen. Do not use liquid cleaners or glass cleaners.
 - If a foreign substance or water gets in this product, turn the power off immediately and disconnect the power adapter. Next, remove the foreign substance or water, and then send the product to your nearest service center.
 - Do not attempt to disassemble or modify this product. There are no user serviceable parts inside this product, and any unauthorized modifications will void the warranty.
 - Although the LCD panel is made with high-precision technology and has effective pixels of 99.99% or more, black dots or bright points of light (red, blue or green) may appear constantly on the LCD panel. This is a structural property of the LCD panel and is not a malfunction.
-

Table of contents

Key features	1
What's in the box	2
Identifying the parts	3
Left view	3
Rear view	5
Control buttons	6
Getting started	7
Using the adjustable foot stand	7
Connecting to power	8
Turning on/off the photo frame	9
Inserting or removing a memory card	10
Compatible memory card formats	11
Copying files to internal memory	12
Operating the photo frame	13
Basic operations	14
Setting date and time	14
Selecting a mode	14
Displaying the clock	15
Photo mode	16
Selecting an image	16
Zooming the photo	17
Playing a slideshow	18
Calendar mode	18
File mode	19
Copying/Deleting the files	19
Source mode	20
Setup mode	21

Options in the Setup mode	22
Frequently asked questions	24
Regulation and compliance	25

Dear Customer:

Thank you for bringing our GiiNii digital photo frame into your home. Now you will be able to view your growing digital picture library in stunning clarity and share great memories with friends and family.

To get the most out of your new GiiNii product, please read through this entire User Manual before use.

Also, please check out our video tutorials on **HOW TO START** and **HOW TO PROGRAM** the digital photo frame at www.giinii.com under Frequently Asked Questions.

Key features

 
This digital photo frame is mainly equipped with the following features:

- Clear and bright pictures
- Enables you to play back photos that are stored on a memory card or on a USB flash drive.
- Allows you to set the level of backlight brightness using the EnerGiiNii function.
- Allows you to play back photos in slideshow with various themes of collage effects.
- Allows you to set auto on/off timer.
- Multi-language On-Screen Display (OSD) menus

What's in the box

Carefully open the packing box and ensure that you have the following items.


1. Digital Photo Frame x 1
2. AC power adapter x 1
3. Quick Start Guide x 1
4. User Manual x 1
5. Registration Card x 1
6. Warranty Card x 1

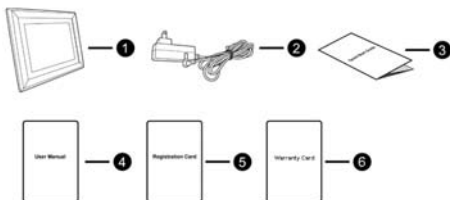

- Actual product appearance may vary from the illustrations shown in this user manual.
- Available accessories may vary depending on the area where you purchased the photo frame.


Identifying the parts

 Left view

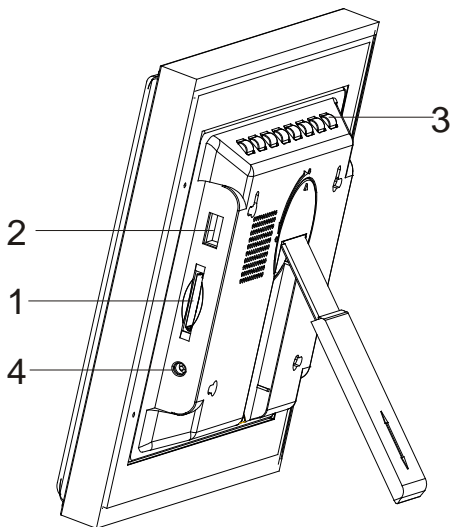


No.	Description
❶	<p>5-in-1 memory card slot</p> <p>Allows for an SD™ / SDHC™, MultiMediaCard™ (MMC), Memory Stick™ (MS), Memory Stick PRO™ (MS PRO), xD-Picture Card™ (xD) memory card.</p> <p>You can play back photos stored on the inserted card, or copy photos from the internal memory into the inserted card. See "Inserting or removing a memory card" on page 10 for details.</p>
❷	<p>USB port</p> <p>Allows for a USB flash drive. You can play back photos stored on the inserted drive.</p>
❸	<p>Power button</p> <p>Press the power button to turn on or turn off the photo frame. See "Turning on/off the photo frame" on page 9 for details.</p>
❹	<p>Power jack</p> <p>Connect one end of the AC power adapter into the power jack and the other end into a power outlet.</p>



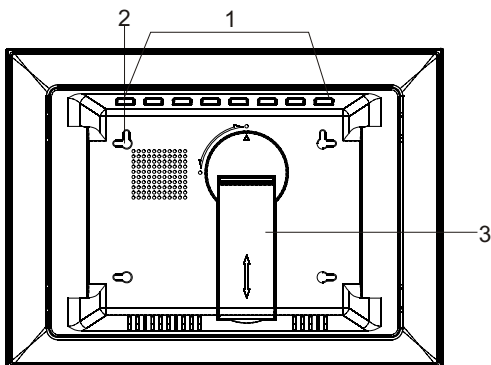 



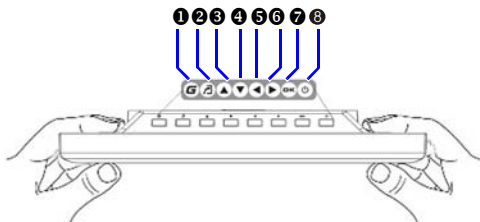 

Rear view



No.	Description
❶	Control buttons Use the control buttons to operate the photo frame. See "Control buttons" on page 6 for details.
❷	Hanging slot (for wall mounting) Allows you to hang the photo frame horizontally on a wall without extending the adjustable foot stand.
❸	Adjustable foot stand See "Using the adjustable foot stand" on page 7 for details.

Control buttons




No.	Button	Description
①		G button
②		Return button
③		Up button
④		Down button
⑤		Left/Previous button
⑥		Right/Next button
⑦		OK button
⑧		Power button


Getting started


Using the adjustable foot stand

 1. On the back of the photo frame, place your finger in the groove to pull the foot stand open as illustrated below.

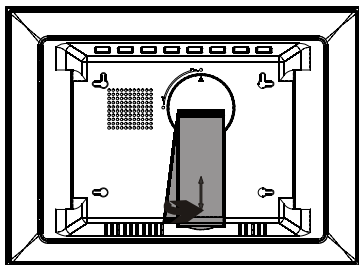

 2. Extend the adjustable foot stand as needed.

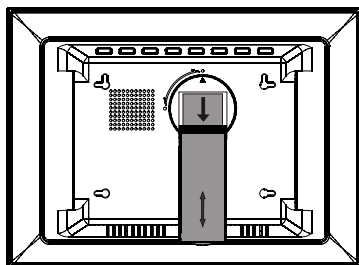



-  • It is recommended to place the photo frame horizontally, because this direction provides the best viewing and operating experience.

- **By using the hanging slots, you can hang the photo frame horizontally or vertically on a wall without extending the adjustable foot stand.**

Connecting to power

 
Connect one end of the AC power adapter into the power jack on the back of the photo frame, and then plug the other end into a power outlet.

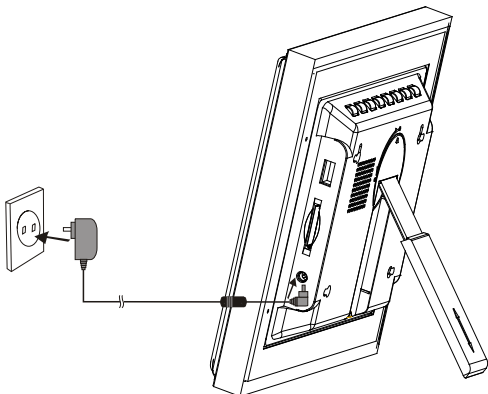

 **Power systems and plug types may vary depending on your country/region.**

Turning on/off the photo frame

 - To turn on the power, press the power button.
- When the power is on, press the power button.

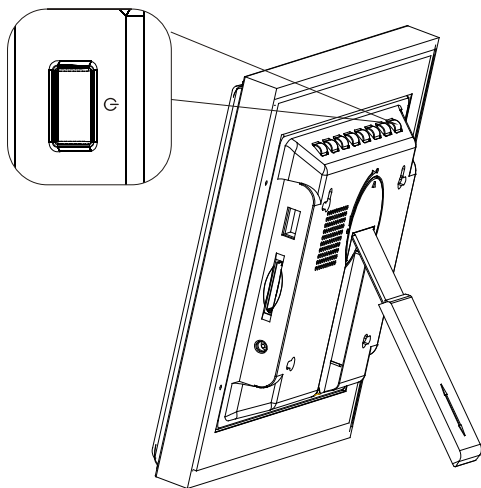


Inserting or removing a memory card

The photo frame comes with preloaded photos in the internal memory. You can turn on the photo frame and play back the preloaded photos with no memory card inserted.

To play back your own photos, insert a photo-loaded memory card or USB flash drive into the corresponding slot on the left side of the photo frame.

To insert the memory card:

 Insert the memory card into the memory card slot as illustrated below.

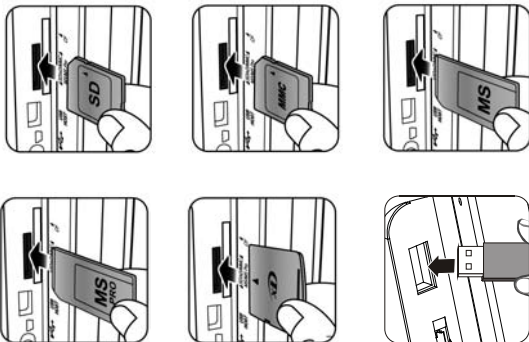

To remove the memory card:

Pull out the inserted memory card from the slot.

Compatible memory card formats


Memory card formats		Maximum capacity
Secure Digital (SD™ / SDHC™)	SD/SDHC, microSD/ microSDHC and miniSD/ miniSDHC (A card adapter is required.)	8G
MultiMediaCard™ (MMC)		2G
Memory Stick™ (MS)		8G
Memory Stick™ (MS)	MS Pro (A card adapter is required.)	8G
xD-Picture Card™ (xD)		2G




- Both 5-in-1 and CF memory card slots support hot-swap function. In other words, you can change or remove the memory card when the power of the photo frame is either turned on or turned off.
- Both FAT16 and FAT32 file formats are supported. However, the NTFS file format is not supported.

Copying files to internal memory

 When the photo frame is turned on and a memory card (or USB flash drive) has been inserted, the following screen appears automatically.

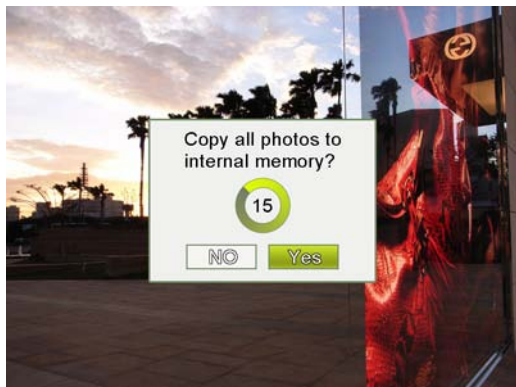

- To view your photos without copying them to the photo frame, highlight **NO** and press . The photos will start to play automatically off your memory card or USB flash drive.
- To copy all the photos contained in the inserted memory card (or USB flash drive), select **Yes** and press to proceed.

 To view your pictures without copying them to the Digital Picture Frame, highlight "NO" and press the "OK" button. The pictures will start to play automatically off your memory card or USB flash drive. To copy all the photos contained in the inserted memory card (or USB flash drive), select "Yes" and press the "OK" button to proceed.

 
Operating the photo frame

After turning on the photo frame, you can use the control buttons on the back to operate the photo frame.



1. Press any control button to bring up the On-Screen Display (OSD) toolbar.
2. Press the control button corresponding to the icon shown on the screen as by its function or in its order.

mapping On-Screen Display toolbar

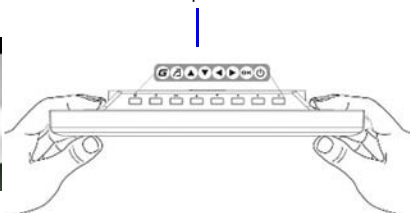control buttons on the back of the photo frame



- The mapping method for the control button on the photo frame and the On-Screen Display (OSD) icon in this user manual will be shown in condensed form.

For example: Press the control button  () to rotate a photo.





























 

control button icon

mapping OSD icon

- The OSD toolbar hides automatically when the photo frame is idle. You can press any button to bring up the toolbar.

Basic operations


Setting date and time

1. When the photo frame is turned on, the preloaded photos in the internal memory start a slideshow automatically (if no memory card has been inserted).
2. Press any control button to bring up the OSD toolbar.
3. Press  repeatedly until you return to the main menu.
4. Press  /  to select **Setup**, and then press .
5. Press  /  to select **Time Setup**, and then press .
6. Press  or  to go to **Current Date**.
 - a. Press  /  to set the year, and then press .
 - b. Press  /  to set the month, and then press .
 - c. Press  /  to set the date, and then press .
7. Press  to select **Current Time**, and then press .
- a. Press  /  to set the hour, and then press .
 - b. Press  /  to set the minute, and then press .
 - c. Press  /  to select AM or PM, and then press .
8. To return to the main menu, press  repeatedly.

Selecting a mode

In the main menu, press  /  to toggle among the following modes: **Photo**, **Calendar**, **File**, **Source** and **Setup**.

Displaying the clock

The Clock view provides two skin types of clock display: analog digital. Press  twice to display the Clock view. When in

Clock view, press  /  to select a desired type.



Analog view




Digital view

 You can set the time in Setup mode.

Photo mode

The **Photo** mode allows you to view photos that are stored in the internal memory, on a memory card or on the inserted USB flash drive.

 
 The photo frame supports the JPEG (*.jpg) and BMP (*.bmp) file formats.

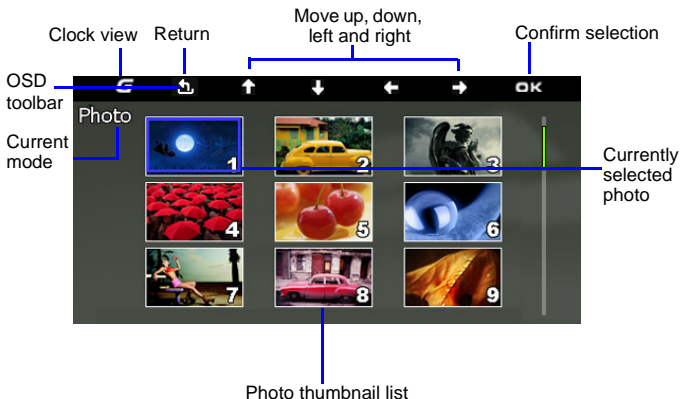

Selecting an image

1. After you enter the **Photo** mode, you will enter Thumbnail view with your stored photos displayed in 9 thumbnails per page.

 
Press  /  /  /  to select an image you want to see.







2. To view the selected image in full screen, press  to enter Single view.

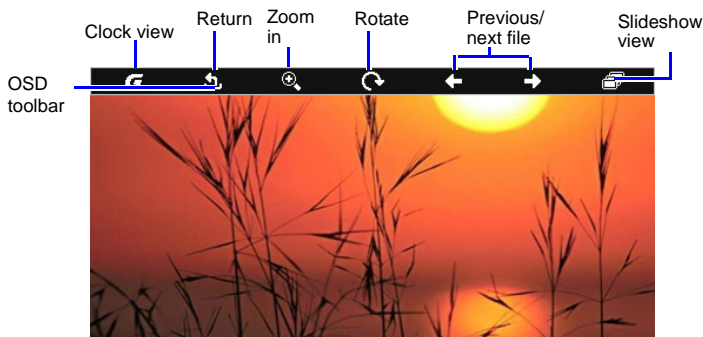3. To rotate the photo clockwise each time by 90 degrees, press



Zooming the photo



1. When in Single view, press  to enter Zoom view.
2. Press  repeatedly to zoom in the selected photo.
3. When the OSD toolbar disappears, press  /  /  /  to move to a particular area you want to see.



Playing a slideshow

1. When in Single view, press **OK** to enter slideshow view.
2. Slideshow of photos automatically starts.
3. To pause the slideshow and enter Single view, press **OK**.
To re-start the slideshow, press **OK** again.

Calendar mode

After you enter the Calendar mode, current time and date will be shown on the screen.



 
Press  /  to view the previous/next month.





You can set the date in the setup mode.

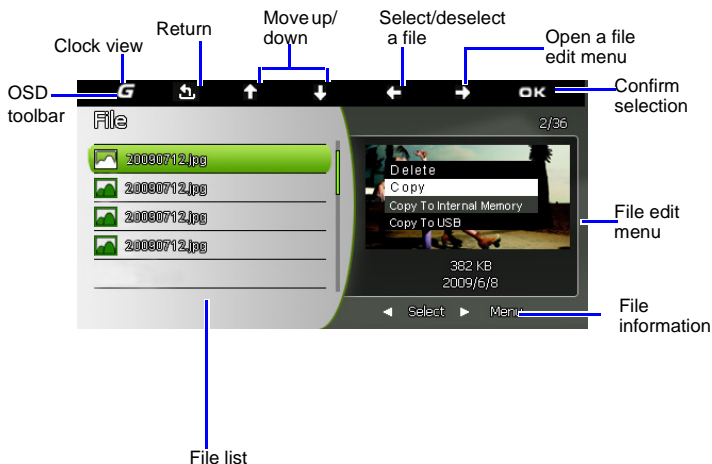


File mode



The **File** mode allows you to view the information of the files stored in the internal memory, on the inserted memory card or on the inserted USB flash drive, such as the file size.







After you enter the **File** mode, press  /  to select a file and its thumbnail or detailed information will be seen in the preview window to the right.

 
Copying/Deleting the files

1. Select a file to edit and press  to mark the selected file. Repeat this step to select more files.
2. Press  on the remote control or press the control button  to open the file edit menu.

- Select **Delete** to delete the selected file(s). Press  to confirm or cancel the action.
- Select **Copy** and then press  to choose to copy the selected file(s) to the internal memory (**Copy to Memory**) or to the inserted USB flash drive (**Copy to USB**).


Source mode

The Source mode allows you to select the source of the files to be viewed, listened or watched on the photo frame. Press  /  /  /  to toggle among the inserted 5-in-1 card, USB flash drive, CF card, and the internal memory.

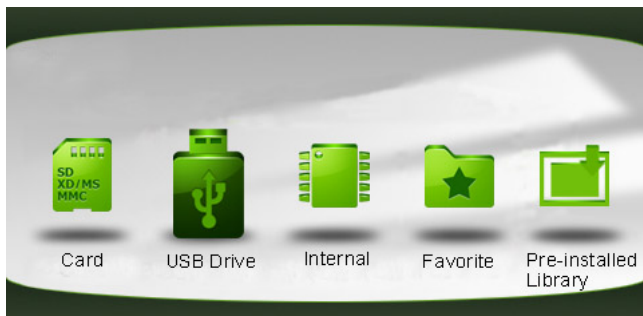

Setup mode

 The **Setup** mode allows you to adjust settings on slideshow, display, time, OSD languages, startup and factory default settings.

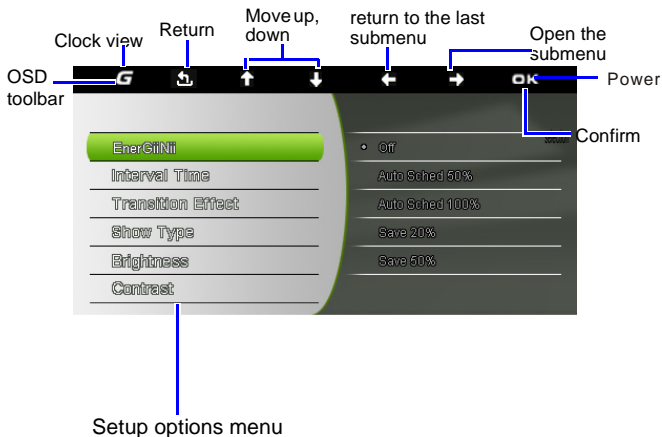

Options in the Setup mode

EnerGiiNii

Sets up power-saving modes for your photo frame:

- **Off:** disables the EnerGiiNii feature.
- **Auto Sched 50%:** enables the EnerGiiNii feature. When enabled, the photo frame reduces 50% screen backlight level automatically during 9:00 p.m and 7:00 a.m.
- **Auto Sched 100%:** enables the EnerGiiNii feature. When enabled, the photo frame turns off 100% screen backlight automatically during 9:00 p.m and 7:00 a.m.
- **Save 20%:** reduces 20% backlight level.
- **Save 50%:** reduces 50% backlight level.

Slideshow setup

Sets up the interval between photos, transition effects, the preferred collage effect for slideshow playback from a list of preset collage themes and the aspect ratio of photo display.

Display Setup

Sets up the level of saturation, screen brightness level and contrast.

Time Setup

Sets up current date, time, auto timer on/off time, and whether to turn on the auto timer.

You can also set Birthday dates, Wedding date and Holidays to enable Collage effects on these particular days.

Clock skin

Sets up clock skin to be applied in Clock view.

Language

Sets up the OSD language.

Set to Default

Returns all the settings back to system default.

Startup Setup

Sets up the first mode to enter upon turning on the photo frame.

Property

Views the remaining/total capacity in the internal memory, the model name and its software version.

Frequently asked questions



What memory card formats are compatible with the photo frame?



SD/SDHC, MMC, MS, MS PRO, xD memory card formats are compatible with the photo frame. For details, refer to "[Compatible memory card formats](#)" on [page 11](#).



Why do some pictures load faster than others?



Higher resolution pictures load slower. Using a lower resolution when taking pictures will speed up loading time.

Regulation and compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential installation. This equipment can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the radio or television and Digital Picture Frame.
- Connect the Digital Picture Frame into an outlet on a circuit different from that to which the radio or television is connected.
- Consult the dealer or an experienced radio/TV technician for help.



A GiiNii, Inc. Company

© GiiNii. 2009

Version 1